ATTENTION

This rifle is classified by the A.T.F. Division of the Internal Revenue Service, U.S. Treasury Dept. as a firearm or dangerous weapon and is released by **Hi-Point Firearms, Beemiller Inc.** with the express understanding that **Hi-Point Firearms, Beemiller Inc.** is not responsible and assumes no liability in any manner whatsoever for injury, death, or damage to property resulting from either intentional or accidental discharge of this firearm, or from its function when used for purposes or subjected to treatment for which it was not designed. **Hi-Point Firearms, Beemiller Inc.** will not honor claims involving this firearm which result from any or a combination of any of the following:

a) Improper, careless or unsafe handling.
b) Use of the wrong caliber ammunition.
c) Use of ammunition, other than original high quality commercially manufactured ammunition, in **GOOD CONDITION**.
d) Unauthorized adjustments, repairs or alterations.
e) Corrosion or neglect.
f) Other influences beyond our direct and immediate control.

Hi-Point Firearms, Beemiller, Inc. will not honor any claim whatsoever by second or subsequent owner of this firearm.

Hi-Point Firearms, Beemiller, Inc. will not be held liable for any injury or damages to any person resulting from the use of this firearm for any purpose, including civil defense, police activity, hunting dangerous game, or combat.

This statement of liability supersedes any other statement of liability, whether expressed or implied.

Care and Use / Maintenance

Bolt can be locked open by inserting an empty magazine and pulling operating handle rearward until bolt locks open or by moving operating handle to rearmost position and at this time pushing roller into the notch in the receiver shroud. Breech, chamber, and barrel inspection and cleaning is easily performed in this position. Barrel should be brushed every 300-400 rounds. Complete disassembly and cleaning should be performed at 1500-2000 rounds.

HI-POINT FIREARMS
by BEEMILLER INC.
1015 Springmill Road • Mansfield, Ohio 44906
(419) 747-9444

STOP!

YOU MUST READ INSTRUCTION SHEET

Always keep it with the rifle. If you lend, give, or sell this rifle, be sure the instruction sheet goes with it. You can get a free instruction sheet from: **Hi-Point Firearms, Beemiller Inc., 1015 Springmill Road, Mansfield, Ohio 44906.**

Call 419-747-9444 to order accessories – (Lasers, Red Dot Scopes, Extra Magazines, etc.)

GET INSTRUCTIONS FROM A COMPETENT FIREARM INSTRUCTOR BEFORE USING ANY GUN.

STATEMENT OF LIMITED WARRANTY

The Model 995TS Carbine is warranted to the original retail customer for life from date of original purchase against defects in material and/or workmanship. All parts and labor or replacement, at our option, are covered.

Transportation to and from repair facilities, damage caused by failure to perform normal maintenance, sales outside the United States, damage due to the use of high pressure, reloaded or other nonstandard ammunition, or any unauthorized repair, modification, misuse, abuse, or alteration of the product is not covered by this Limited Warranty.

Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited to the lifetime of the original retail purchaser. Consequential or incidental damages or expenses, or any other expenses are not covered by this warranty.

TO OBTAIN SERVICE UNDER WARRANTY

Send your firearm to us via UPS along with a photocopy of your proof of retail purchase freight charges prepaid. Be sure to include a statement as to the reason for return and make sure to include your complete return street address. Ship your product to the following address: **Hi-Point Firearms, Beemiller Inc., 1015 Springmill Road, Mansfield, Ohio 44906. Call 419-747-9444 for specific instructions.**

FOR BEST RESULTS USE JACKETED AMMUNITION.

MODEL 995TS CARBINE

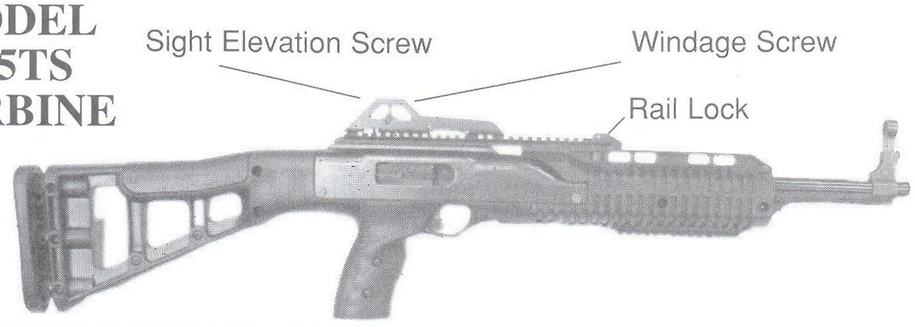

Rails are standard weaver. *Please* **DO NOT OVERTIGHTEN** *attachments* (rings, scopes, lasers, etc.)

Operating handle should be installed as shown and tightened BY HAND FIRMLY with the ADJUSTMENT TOOL.

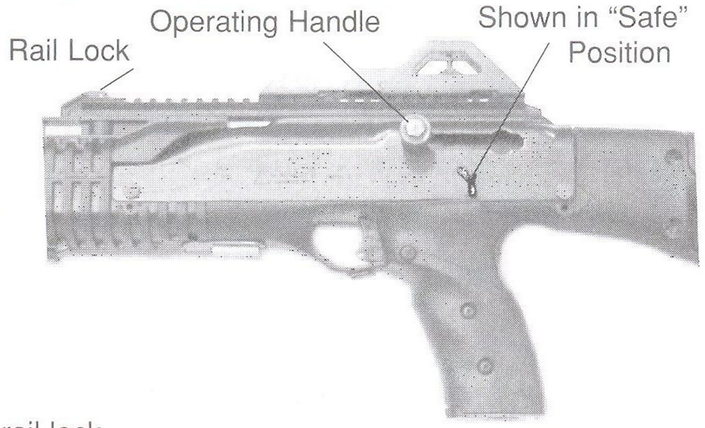

Head can be used to open rail lock

ALL FIREARMS ARE DANGEROUS PLEASE BE CAREFUL

***** NO SAFETY DEVICE REPLACES COMMON SENSE. *****

We strongly advise that you familiarize yourself with all the mechanisms of this gun, or any gun, before putting any ammunition into it. ***We also strongly advise that the yellow safety plug we provide be kept in the chamber during transportation or storage of this firearm. A new plug will be provided free of charge upon request.***

We provide reasonable care in the manufacture of this rifle, but assume no responsibility for its care, handling and use.

CAUTION

For your safety, and that of others, we strongly recommend that you do not store, carry or handle this, or any other firearm with a cartridge in the barrel until you are ready to shoot. A cartridge from the magazine supply can be placed in the barrel, ready to shoot, in about the same length of time as required to move the safety bolt from the "Safe" position to the "Fire" position. **Magazine capacity is ten cartridges.**

BE CAREFUL!

CAUTIONS:

ALWAYS handle your rifle as if it were loaded, so that you never fire it accidentally when you think it is unloaded.

NEVER point your rifle at anything you do not intend to shoot so if it fires accidentally, injury, death, or damage to property will be prevented.

NEVER take anyone's word that a gun is unloaded; check for yourself with fingers off the trigger and gun pointed in a safe direction, so that you never fire the gun accidentally when you think it is unloaded.

ALWAYS be sure barrel and action are clear of obstructions. Clean a fouled rifle immediately so that it will function correctly and safely.

NEVER squeeze the trigger or put your finger in the trigger guard until you are aiming at a target and ready to shoot. This will prevent you firing the rifle when it is pointing in an unsafe direction.

NEVER put your finger on the trigger while cocking. (See "Loading the Rifle")

NEVER extend your fingers past the end of the muzzle.

ALWAYS be absolutely sure of your target and the area behind it before you squeeze the trigger. A bullet could travel through or past your target up to 1-1/2 miles ... if in doubt, don't shoot.

NEVER leave a loaded rifle unattended. Someone, especially a child, may fire it and cause injury, death, or damage to property.

NEVER use your rifle if it fails to function properly, and never force a jammed action, as a round may explode causing serious injury, possible death, or severe damage to your rifle.

NEVER leave your rifle cocked, ready to fire, as this condition is extremely dangerous, and the rifle could easily be accidentally discharged, causing injury, death or damage to property.

NEVER leave the magazine partially in the handle. The magazine should either be completely inserted in the handle, with the magazine in its proper position or completely removed.

HI-POINT FIREARMS

MODEL 995TS

BEEMILLER INC.
1015 SPRINGMILL ROAD
MANSFIELD, OH 44906

PARTS LIST FOR MODEL 995TS CARBINE

SIGHTING ASSEMBLY

1. Sight Holder Assembly
1a. Top rail
2. Sight Holder Screws (3)
3. Sight Elevation Screw
4. Receiver Shroud
5. Receiver Shroud Nuts (2)
   or Receiver Shroud Pin Clips (2)
6. Receiver Shroud Screws (2)
   or Receiver Shroud Pins
7. Back Up Plates (2)
8. Forend Cover
9. Rib
10. Forend Assy Pin
11. Washer
12. Crosspin
13. Rail Lock
14. Front Sight Base
15. Front Sight
16. Front Sight Screw
17. Front Sight Base Set Screws (2)

FIRING ASSEMBLY

18. Breech Bolt
19. Firing Pin
20. Firing Pin Spring
20a. Firing Pin Assist Spring
21. Bolt Retainer
22. Ejector Key Pin
23. Ejector Keys
24. Ejector Key Spring
25. Operating Handle
26. Roller
27. Bolt Retainer Clip
28. Recoil Spring
29. Guide Pin
30. Trigger Assembly
31. Sear Cam
32. Sear Pin
33. Sear Pin Spring
34. Counter Weight
35. Counter Weight Pivot Pin
36. Barrel Frame Support (Opptional)
37. Receiver
38. Barrel
39. Receiver Clip
40. Hold Open
41. Hold Open Spring
42. Hold Open Pin

STOCK ASSEMBLY

43. Stock
44a. Stock Bolts 1" (7)
44b. Stock Bolts 5/8" (2)
45. Stock Nuts (9)
46. Stock Clip
47. Handle Support Screws (4)
48. Handle Support (2)
49. Magazine Catch Cap
50. Magazine Catch
51. Magazine Catch Spring
52. Magazine Assembly
53. Front Rail
54. Bottom Rail
55. Bottom Rail Screws (2)
56. Bottom Rail Nuts (2)
57. Cheek Rest
58. Support Tube
59. Guide Rod Springs (3)
60. Guide Rods (3)
61. Butt Plate
62. Butt Plate Screws (3)

To order extra magazines, send a $17 money order (includes shipping & handling) per magazine to:

Beemiller Inc., 1015 Springmill Road, Mansfield, OH 44906

We accept major credit cards • 419-747-9444.
Prices available upon request. Changes in design may occur from time to time. Always specify the serial number of your rifle with your inquiry.

EXPLODED VIEW

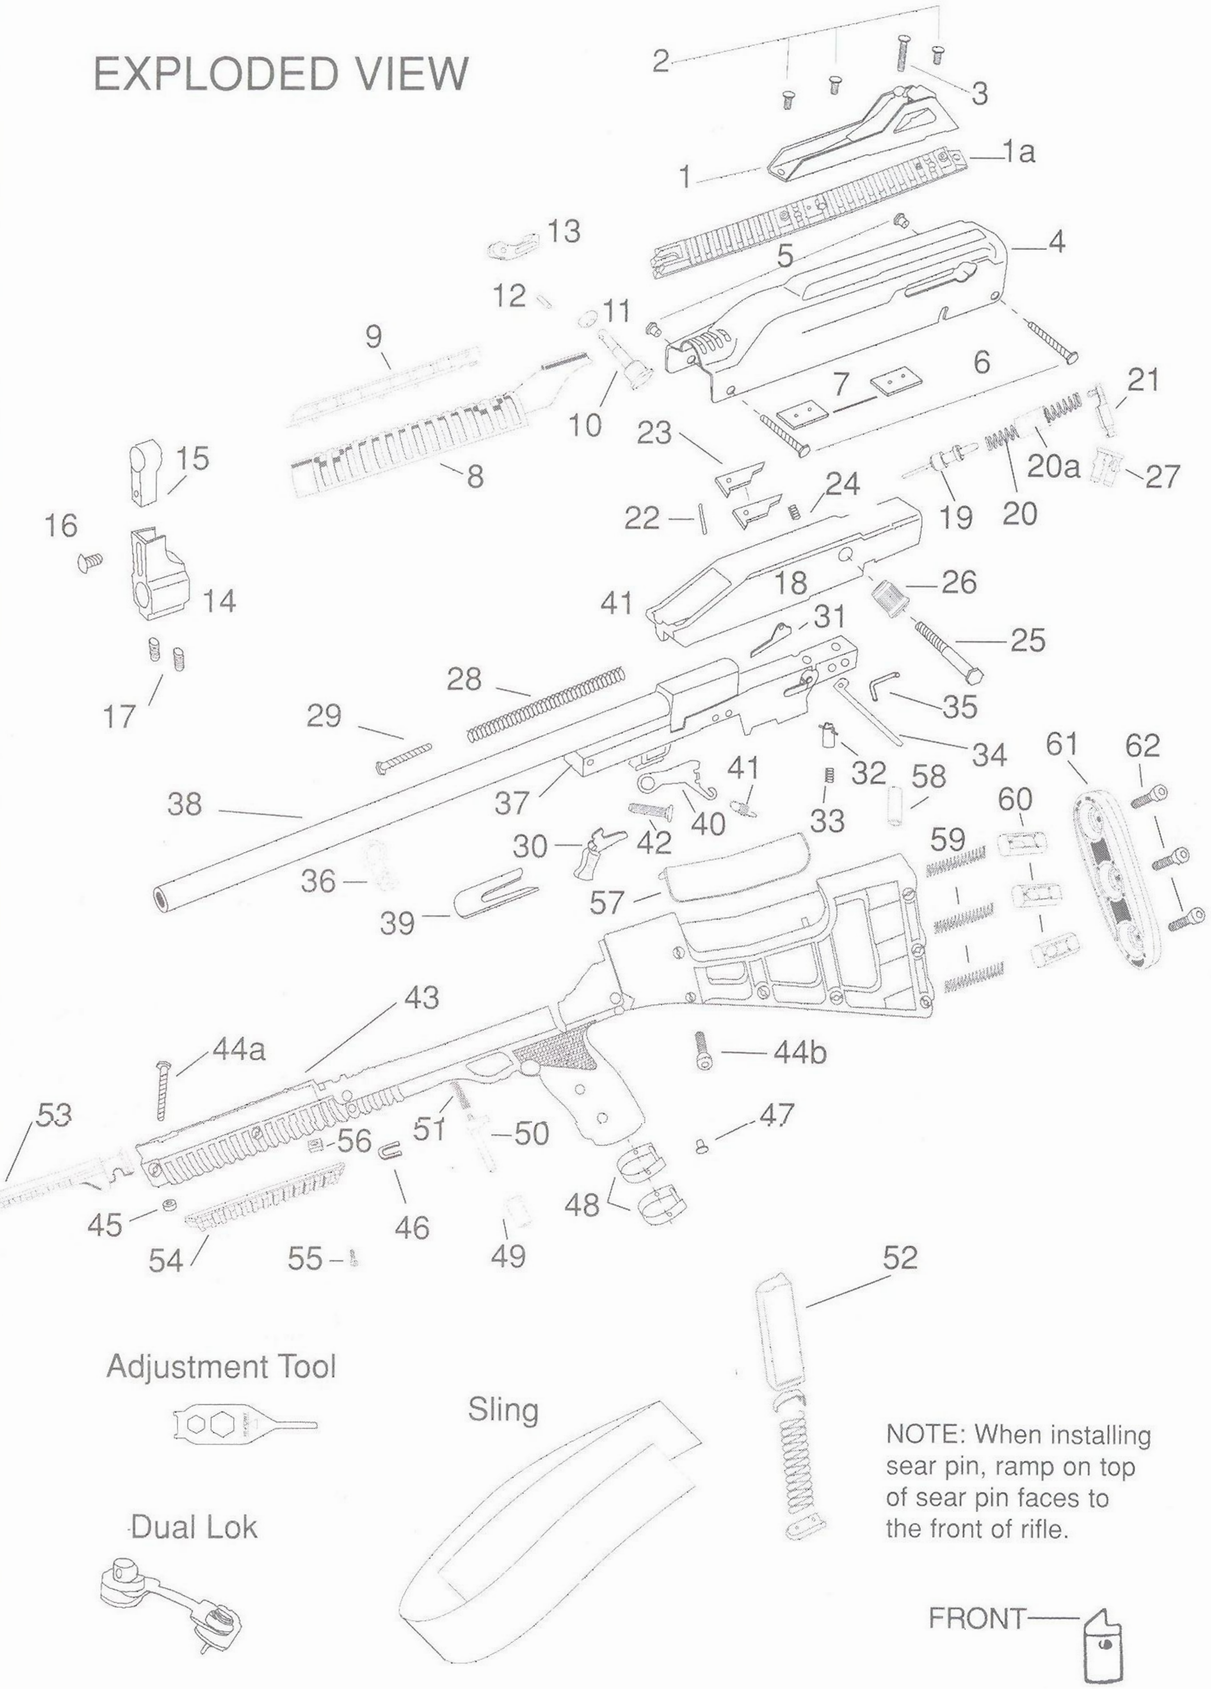

Adjustment Tool

Dual Lok

Sling

NOTE: When installing sear pin, ramp on top of sear pin faces to the front of rifle.

FRONT

Safety/Bolt Lock is located at top of left grip. Sliding safety lever upward, into notch engages safety and places rifle in "SAFE" position.

Sliding safety lever down, out of notch, places rifle in "Firing" position.

Bolt can be locked open by moving operating handle to rearmost position and at this time pushing roller into the notch in the shroud. Breech, chamber, and barrel cleaning are easily performed in this position. Barrel should be brushed every 300-400 rounds. Complete disassembly and cleaning should be performed at 1500-2000 rounds.

Safety is engaged **only** when lever is up in the notch, when lever is out of notch, rifle is in "Firing" position.

LOADING THE RIFLE: After loading your magazine, insert it into the bottom of the handle and push it into the rifle as far as possible. When fully inserted, the magazine catch will hook the magazine and hold it in its proper position. Making sure your fingers are not touching the trigger, **point your rifle in a safe direction** and with your other hand firmly grasp the operating handle and pull it as far rearward as it will go. ***RELEASE THE OPERATING HANDLE FROM ITS REAR MOST POSITION ALLOWING IT TO GO FORWARD ON ITS OWN ACCORD.*** This procedure places the first cartridge into the chamber and the rifle is ready for firing. Subsequent feeding and ejection operations are performed automatically until the last round is fired. At this time the bolt will lock open.

CONTINUE FIRING: Remove empty magazine from the magazine well, then insert a loaded magazine into the magazine well. Pull operating handle backward until you hear an audible click. Release and allow the bolt to go forward on its own accord. This will load the first cartridge into the chamber and the rifle is again ready to fire.

DISENGAGE HOLD OPEN: To disengage the Hold Open - remove empty magazine, then grasp operating handle and pull backward until you hear an audible click. Releasing the bolt will return it to the closed position.

CAUTION: UNLOAD YOUR RIFLE IF YOU DO NOT INTEND TO SHOOT IMMEDIATELY!

UNLOADING WITHOUT FIRING: Always point your rifle in a safe direction before attempting to unload it. To unload unfired cartridges, move the magazine catch inward until the magazine can be pulled from the rifle. **AFTER THE MAGAZINE IS REMOVED, PULL THE OPERATING HANDLE TO THE REAR TO REMOVE THE CARTRIDGE FROM THE BARREL CHAMBER.** *As a safety precaution, always check the barrel chamber visually by holding the operating handle back and looking into the bolt, chamber and magazine cavities.*

Care and Use / Maintenance

Bolt can be locked open by inserting an empty magazine and pulling operating handle rearward until bolt locks open or by moving operating handle to rearmost position and at this time pushing roller into the notch in the receiver shroud. Breech, chamber, and barrel inspection and cleaning is easily performed in this position. Barrel should be brushed every 300-400 rounds. Complete disassembly and cleaning should be performed at 1500-2000 rounds.

DISASSEMBLY:

Rifle must be unloaded to perform disassembly. Magazine must be removed. Using a 5/16" wrench or nut driver and the adjustment tool provided with the rifle, unscrew the shroud screws and set them aside. Next, unscrew the operating handle then remove the receiver clip. Insert head of adjustment tool or coin into rail lock and roll backwards to unlock rail. Push forward on forend cover and lift off. The receiver shroud and barrel shroud can be lifted off at this time and the firing assembly can be removed. Pull bolt retainer clip rearward until it stops. Pull breech bolt rearward 1/4" and lift upward. This removes bolt assembly from receiver. Reassemble by reversing disassembly procedure. DO NOT OVERTIGHTEN ANY SCREWS OR NUTS. SNUG IS SUFFICIENT.

SIGHT ADJUSTMENT

VERTICAL CORRECTION (ELEVATION)

COARSE ADJUSTMENT (Front Sight): To raise point of impact, lower front sight. To lower point of impact, raise front sight. *DO NOT OVERTIGHTEN SET SCREWS.*

FINE ADJUSTMENT (Rear Sight): To raise point of impact, raise rear sight. To lower point of impact, lower rear sight.

The sight can be raised and lowered by turning the sight elevation screw.

HORIZONTAL CORRECTION (WINDAGE)

To move point of impact to the right, move peep sight to the right. This is accomplished by turning the windage screw on the right side of the sight holder.

ALL FIREARMS ARE DANGEROUS
PLEASE BE CAREFUL